


User Manual

Remote Control MP20V Receiver

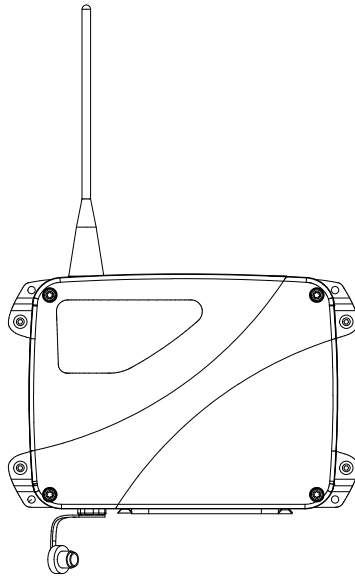

Revision history

Table of revisions

Date	Changed	Rev
January 2019	Rebranded to Danfoss Power Solutions	0101

Contents

Safety instructions

General safety.....	4
Safety warnings.....	4

Technical description

Dimensions.....	6
Hardware description.....	7

Installation

Receiver installation.....	8
Input and output configuration.....	9
Digital outputs.....	9
Analog outputs.....	11
Pinout.....	12

Troubleshooting

Receiver icon troubleshooting.....	13
------------------------------------	----

Safety instructions

MP20V general safety

The following safety instructions must be read carefully in order to install and use the product properly and to keep it in perfect working condition and to reduce the risk of misuse.

Potential damage to operator and product.

Do not use this product on machines in potentially explosive atmospheres unless the model is ATEX/RATEX certified to do so.

- Strictly adhere to the installation instructions contained in this document.
- Make sure that professional and competent personnel carry out the installation.
- Ensure that all site and prevailing safety regulations are fully respected.
- Make sure that this document is permanently available to the operator and maintenance personnel.
- Keep the transmission key when the set is not in use.
- On starting each working day, check to make sure that the STOP button and other safety measures are working.
- When in doubt, press the STOP button.
- Whenever several sets have been installed, make sure the transmitter is the right one. Identify the machine controlled on the label for this purpose on the transmitter or by using the display (in case it has one).
- Service the equipment periodically.
- When carrying out repairs, only use spare parts from Danfoss.

MP20V safety warnings

Potential damage to operator and product.


Follow the guidelines below to reduce risk of injury to the operator and the product.

- Use the device with the manufacturer's battery and battery charger (if applicable).
- Only allow qualified personnel to operate the equipment.
- Always set the STOP button in the off position when not in use.
- Always press STOP before plugging in tether cable (if applicable).
- Do not operate product when visibility is limited.
- Make sure product is compatible with the machine.
- Avoid knocking or dropping the product.
- Do not use the product if a failure is detected.


Changes or modifications not approved by Danfoss can void the user's authority to operate this product.

Safety instructions


Quick reference precautions

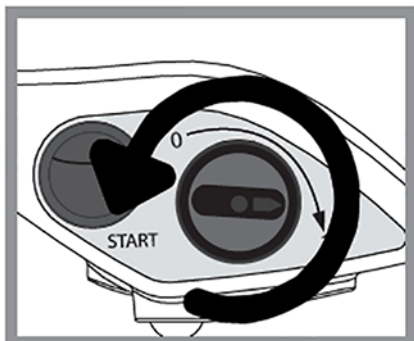


Remove the transmission key only when the set is not in use or to deny the access

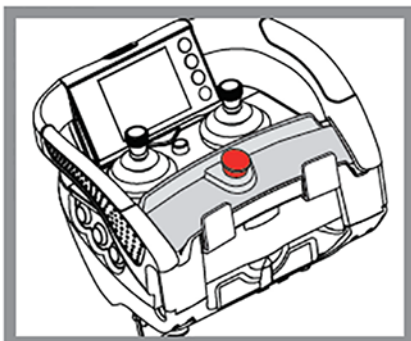


When in doubt, press the STOP button

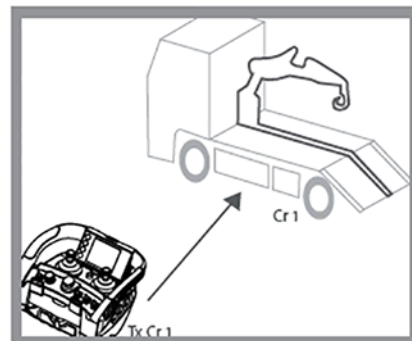


Make sure the transmitter works with the machine to be handled

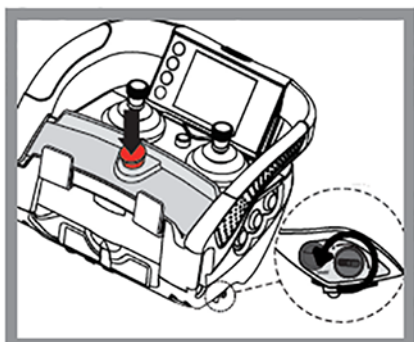

After use set the contact key and the STOP button

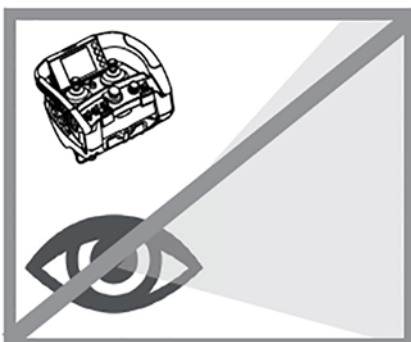

Do not use the set when visibility is limited

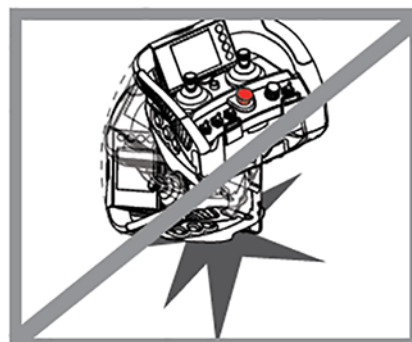


Avoid knocking or dropping the set

Technical description


MP20 dimensions

Dimensions in mm

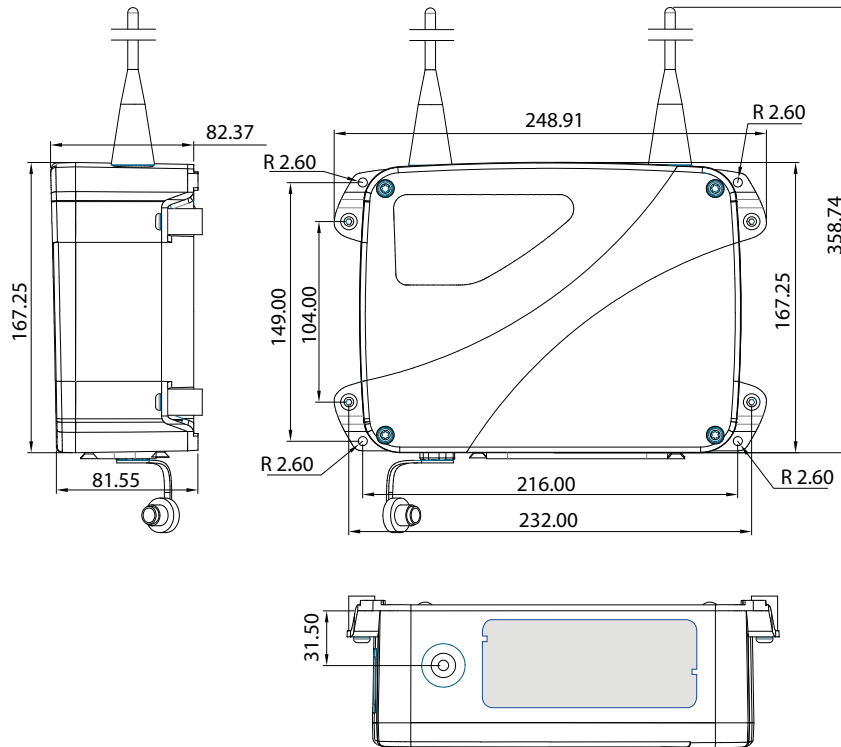

Technical description

MP20V hardware description

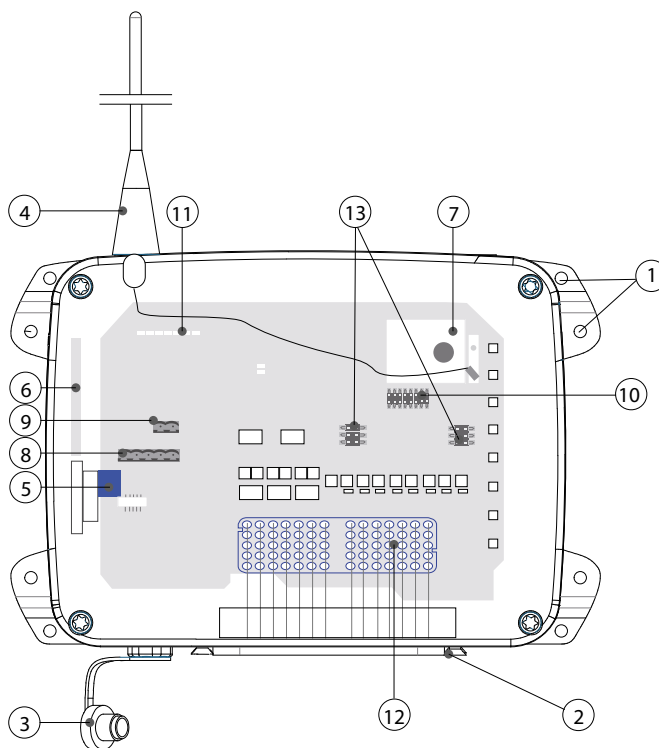

1. Fixing slots (fixed assembly or anti-vibration)
2. DEUTSCH connector
3. Tether connection
4. External antenna A60 (433) or A70 (870)
5. External EEPROM
6. LCD connection
7. TR800-CE MCX radio
8. CAN connection
9. CAN power supply
10. BUS termination CAN
11. Signaling intern LEDs
12. DEUTSCH connector pinout
13. Switches to control voltage options

Installation

MP20V receiver installation


The below information describes hazards to be aware of during installation and steps to locate the receiver.

Risk of shock

Completely shut down the machine when installing the receiver.


Check the power supply and shut off the main switch to disconnect the interface cable between the receiver and the machine's electrical box.

1. Find an easily accessible and clear location with a direct vision between the receiver's antenna and the transmitter's working area.

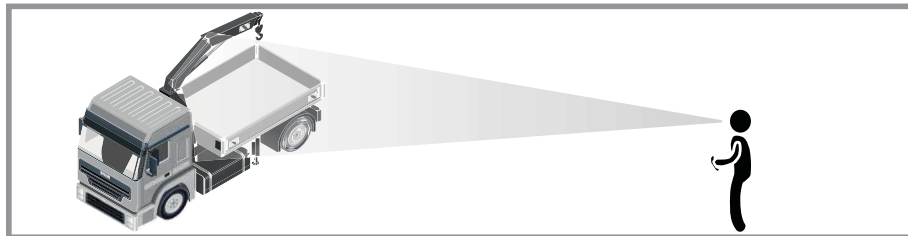


2. Optional: If it is difficult to achieve direct vision between the receiver's antenna and the transmitter's working area, it is recommended to use an extended antenna in a clear location (only for models that allow an antenna).

In areas of high vibration, the use of dampers is advised.

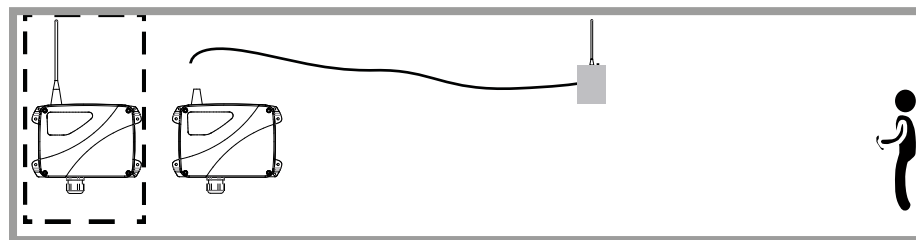

3. Proceed to connect the power supply. Use the connection block diagram provided with the system, where the correspondence between the transmitter maneuvers and the receiver's outputs are detailed.

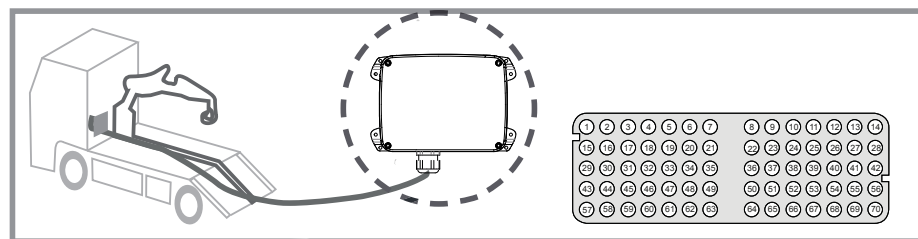


4. Check if the electrical installation and verify if there's an option to connect the neutral or the ground cable. In that case, don't forget to connect the ground cable.

The use of fireproof or flame retardant cables are recommended for the connection.

Installation


MP20 input and output configuration

The MP20 includes a 7.5A permeable internal fuse.

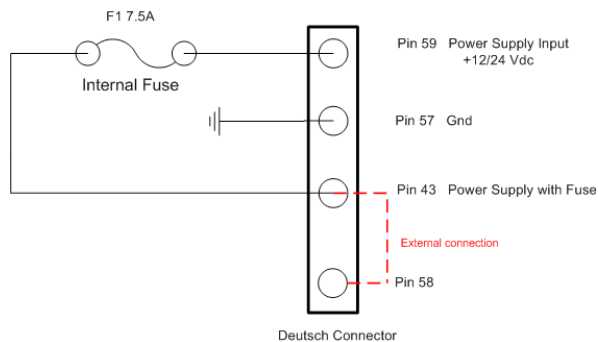


MP20 digital outputs

The digital outputs K1-K4 have a common contact at pin 47 of the connector. This pin is connected to pin 46 (stop) for powering up this group of outputs. Maximum 2A per output. It is recommended to use K1 for by-pass valve.


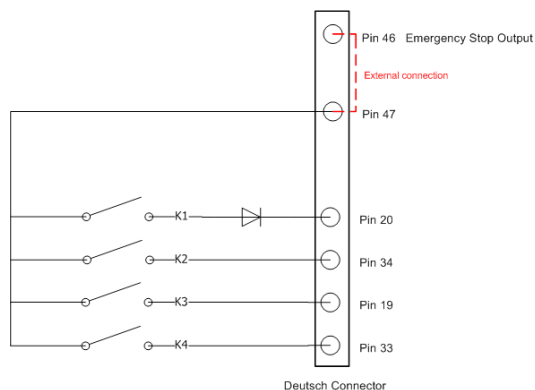


The digital output K5-K12 have a common contact at pin 48 of the connector. This pin is connected to pin 45 (stop) for powering up this group of outputs. Maximum 2A per output.

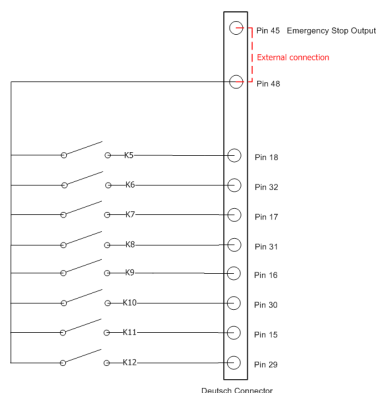

As an alternative, the K5-K12 output group can be connected directly to the external general power supply in order to provide a higher capacity of current.

Installation

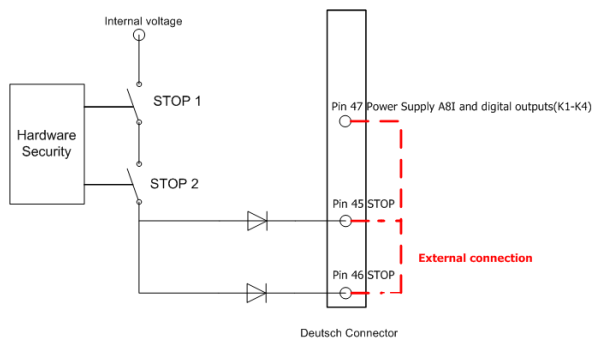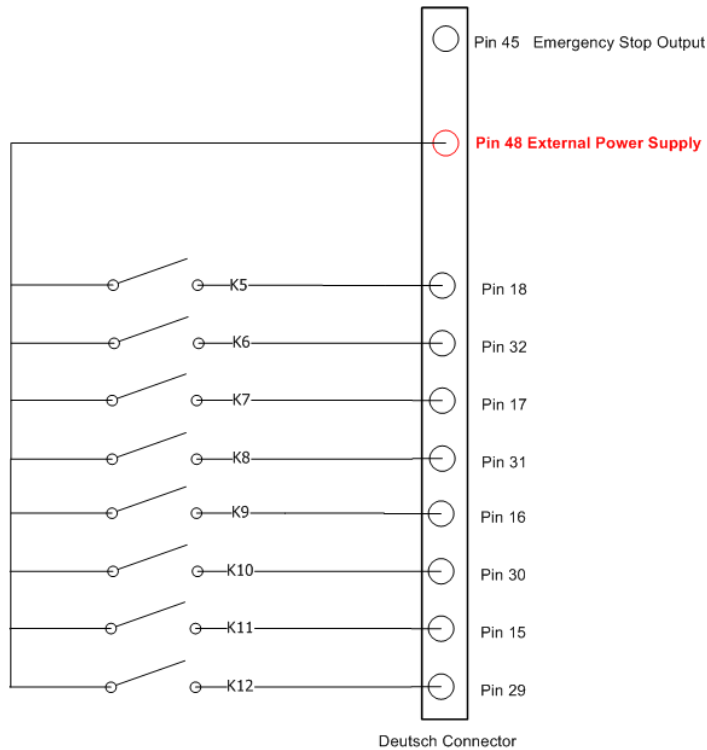


Installation

MP20V analog outputs

The analogue outputs, that are different for MP20A or MP20V, have a common contact at pin 47 of the connector. This pin is connected to pin 46 (stop) for powering up the 1-8 outputs.


Nsa1-Nsa8 have a common contact at pin 47 of the connector. Pin 47 connects with pin 46 (STOP) in order to feed nSA1-nSA8 outputs. Maximum 20mA per output.

The MP20V allows to choose the control voltage in order to set the output power with the selection of 2 switches. Control voltage options: 0-5V, 0-10V, 0-Vcc.

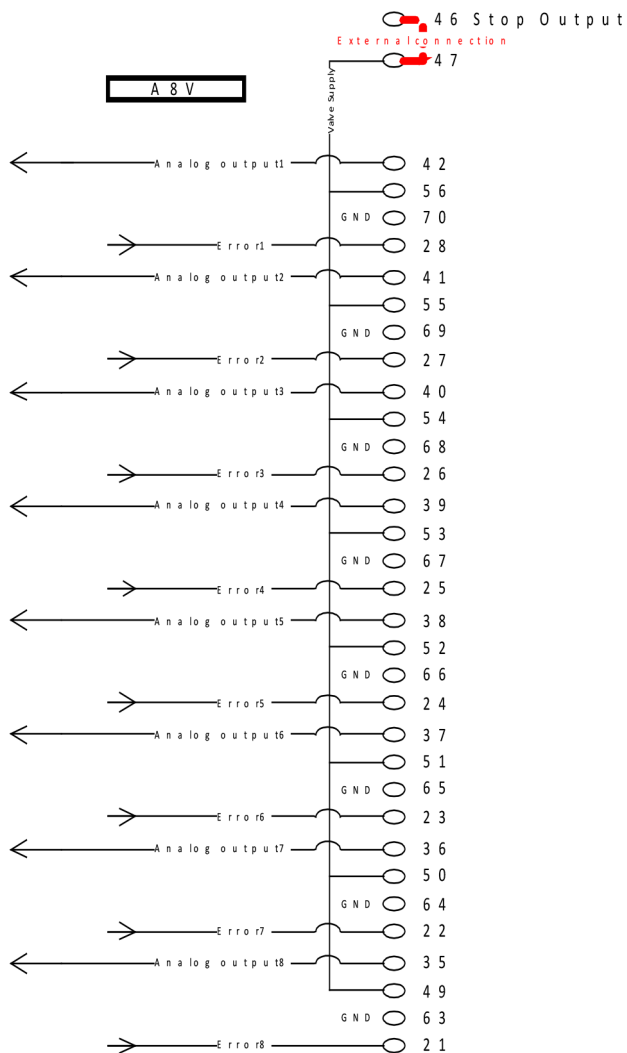

Installation



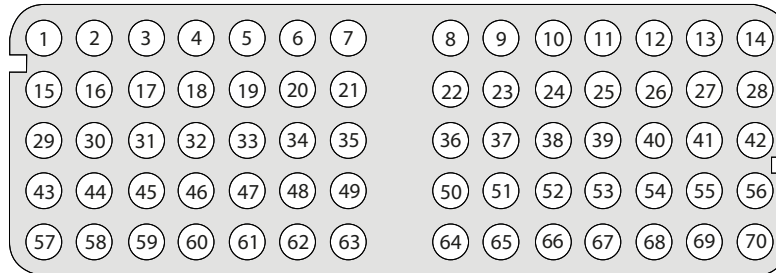


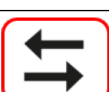
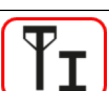



MP20V pinout



Pin	Description	Pin	Description
1	CAN-H	36	SA-7
2	CAN-GND	37	SA-6
3	CAN-L	38	SA-5
4	-	39	SA-4
5	-	40	SA-3
6	-	41	SA-2
7	IN-4	42	SA-1
8	-	43	PSWF
9	-	44	HAND
10	-	45	STOP
11	-	46	STOP
12	-	47	ABV; K1-4
13	-	48	K5-K12
14	-	49	Vdc8
15	K11	50	Vdc7
16	K9	51	Vdc6
17	K7	52	Vdc5
18	K5	53	Vdc4
19	K3	54	Vdc3
20	K1	55	Vdc2
21	Err8	56	Vdc1
22	Err7	57	GND
23	Err6	58	+RRC
24	Err5	59	+12/24V
25	Err4	60	IN-3
26	Err3	61	IN-2
27	Err2	62	IN-1
28	Err1	63	GND-8
29	K12	64	GND-7
30	K10	65	GND-6
31	K8	66	GND-5
32	K6	67	GND-4
33	K4	68	GND-3
34	K2	69	GND-2
35	SA-8	70	GND-1

Troubleshooting

Receiver icon troubleshooting

Icon	Description	Action
	Power failure	Check the receiver power supply
	Hardware error	Contact distributor; replace receiver
	CAN error	Contact your distributor
	Repose state due to active stop	Release stop button and turn transmitter on
	Repose state due to passive stop	Reestablish link to activate the transmitter
	Linked state	Correct link
	Correct ID (link quality as indicated by the bar)	In case of no signal, check if the transmitter is turned on
	Incorrect ID	In case of interference, change frequency channel
	RF signal detected	In case of interference, change frequency channel
	Mask error	Contact your distributor

Products we offer:

- DCV directional control valves
- Electric converters
- Electric machines
- Electric motors
- Hydrostatic motors
- Hydrostatic pumps
- Orbital motors
- PLUS+1® controllers
- PLUS+1® displays
- PLUS+1® joysticks and pedals
- PLUS+1® operator interfaces
- PLUS+1® sensors
- PLUS+1® software
- PLUS+1® software services, support and training
- Position controls and sensors
- PVG proportional valves
- Steering components and systems
- Telematics

Danfoss Power Solutions is a global manufacturer and supplier of high-quality hydraulic and electric components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market as well as the marine sector. Building on our extensive applications expertise, we work closely with you to ensure exceptional performance for a broad range of applications. We help you and other customers around the world speed up system development, reduce costs and bring vehicles and vessels to market faster.

Danfoss Power Solutions – your strongest partner in mobile hydraulics and mobile electrification.

Go to www.danfoss.com for further product information.

We offer you expert worldwide support for ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide you with comprehensive global service for all of our components.

Comatrol

www.comatrol.com

Turolla

www.turollaocg.com

Hydro-Gear

www.hydro-gear.com

Daikin-Sauer-Danfoss

www.daikin-sauer-danfoss.com

Local address:

**Danfoss
Power Solutions (US) Company**
2800 East 13th Street
Ames, IA 50010, USA
Phone: +1 515 239 6000

**Danfoss
Power Solutions GmbH & Co. OHG**
Krokamp 35
D-24539 Neumünster, Germany
Phone: +49 4321 871 0

**Danfoss
Power Solutions ApS**
Nordborgvej 81
DK-6430 Nordborg, Denmark
Phone: +45 7488 2222

**Danfoss
Power Solutions Trading
(Shanghai) Co., Ltd.**
Building #22, No. 1000 Jin Hai Rd
Jin Qiao, Pudong New District
Shanghai, China 201206
Phone: +86 21 3418 5200

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.